

Side Rail	Cross Brace	48"	SECTION 2048	20"
			<b>\$42.75</b>	

Side Rail	Cross Brace	48"	SECTION 1848	18"
			<b>\$40.50</b>	

Side Rail	Cross Brace	48"	SECTION 1648	16"
			<b>\$38.35</b>	

Side Rail	Cross Brace	48"	SECTION 1248	12"
			<b>\$33.70</b>	

Side Rail	Cross Brace	36"	SECTION 2036	20"
			<b>\$36.75</b>	

Side Rail	Cross Brace	36"	SECTION 1836	18"
			<b>\$34.45</b>	

Side Rail	Cross Brace	36"	SECTION 1636	16"
			<b>\$32.40</b>	

Side Rail	Cross Brace	36"	SECTION 1236	12"
			<b>\$28.85</b>	

Side Rail	Cross Brace	30"	SECTION 2030	20"
			<b>\$36.75</b>	

Side Rail	Cross Brace	30"	SECTION 1830	18"
			<b>\$34.45</b>	

Side Rail	Cross Brace	30"	SECTION 1630	16"
			<b>\$32.40</b>	

Side Rail	Cross Brace	30"	SECTION 1230	12"
			<b>\$28.85</b>	

Side Rail	Cross Brace	24"	SECTION 2024	20"
			<b>\$28.90</b>	

Side Rail	Cross Brace	24"	SECTION 1824	18"
			<b>\$27.25</b>	

Side Rail	Cross Brace	24"	SECTION 1624	16"
			<b>\$25.15</b>	

Side Rail	Cross Brace	24"	SECTION 1224	12"
			<b>\$22.10</b>	

Side Rail	Cross Brace	16"	SECTION 2016	20"
			<b>\$21.80</b>	

Side Rail	Cross Brace	16"	SECTION 1816	18"
			<b>\$20.65</b>	

Side Rail	Cross Brace	16"	SECTION 1616	16"
			<b>\$19.00</b>	

Side Rail	Cross Brace	16"	SECTION 1216	12"
			<b>\$14.70</b>	

Leg Assemblies should be spaced every 3-4 feet in your layout



**BENCHWORK**

Jackson Harbor Road • Washington Island, WI 54246 • 920-847-2264